

Acoustic Panels Install Instructions

Using Standard size 1200mm*600mm

Parts: 8* Acoustic panels (1200mm*600mm*50mm)
5*Flocked MDF panels 2500mm*200mm*10mm)
10 lengths of wood (2400mm*100mm*50mm)
Screws /fixings for mounting wood to wall
Adhesive Velcro or double sided heavy duty tape
Screws with flock covers if required
LED Tape if adding light effect (with PSU, Driver and amplifier)

1. Mount 1st length of wood on wall at start of feature, then mount 2nd length 150mm from 1st
2. Mount 3rd length 610mm from 2nd, next mount 4th 100mm from 3rd.
3. Mount 5th to 9th same as above then mount the last length 150mm from 9th. See Fig.1
4. Fit acoustic panels into space between wood secure with Velcro if required
5. Run LED Tape on to edges of wood as shown in Fig.2 Run connecting cables back to LED driver/ Amplifier.
6. Mount Flocked MDF panels using Velcro/ double sided tape or Screws Fig 3
(If screwed use flock covers to hide screw heads)

Fig.1

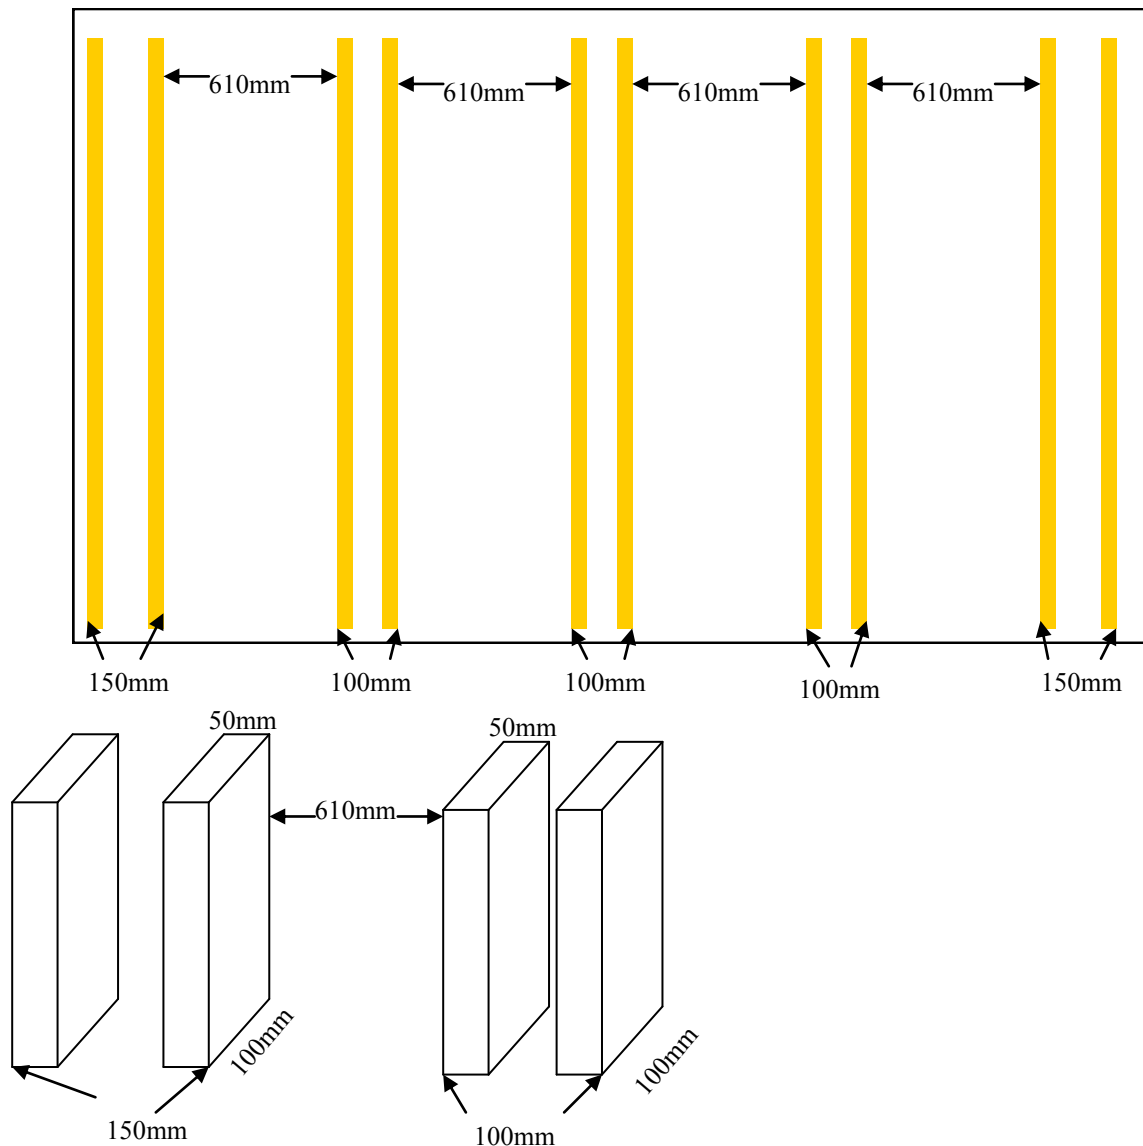


Fig 2

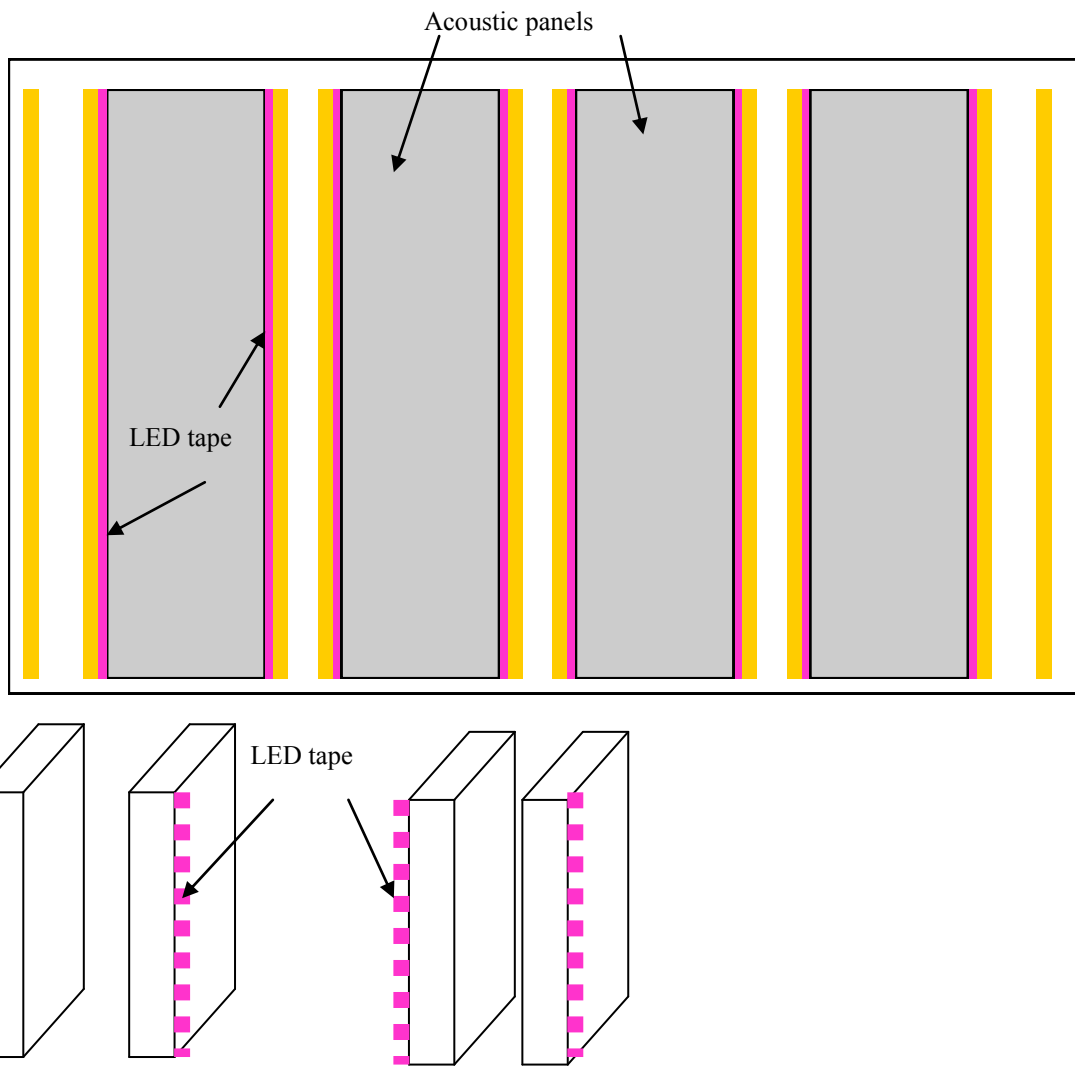


Fig 3

